
CDimplex

Comfort. By design

GDH-DEH20EP

20L DEHUMIDIFIER

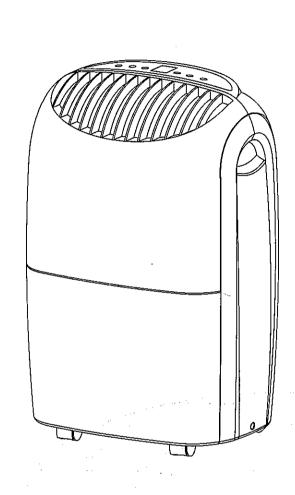


CONTENTS

Description of components/function	1
Operating Instructions	2
Continuous Drainage	3
Safety Guide	4
Maintenance	5
Specifications L	ast Page


OWNERS MANUAL

VOLTAGE: 220-240V~50Hz

DESCRIPTION OF COMPONENTS

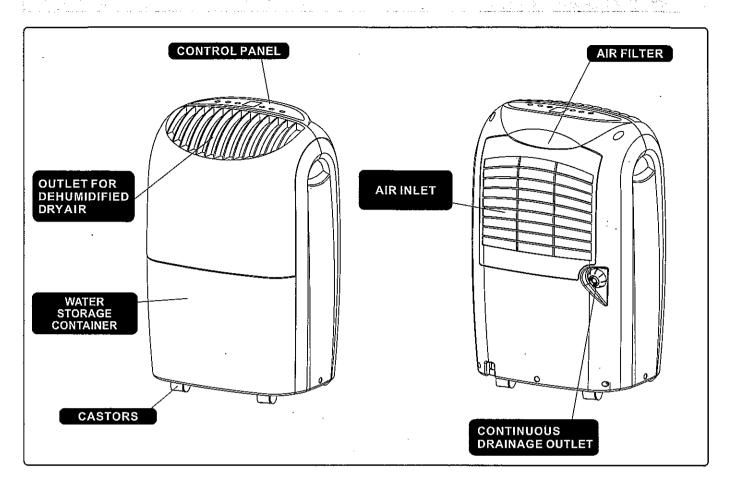



FUNCTION EXPLANATION

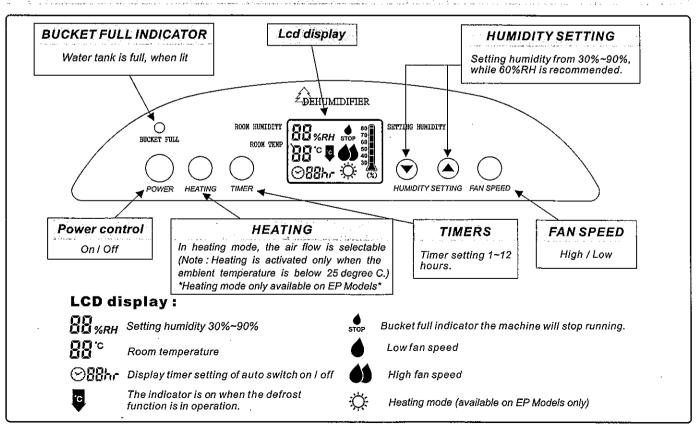


OPERATION INSTRUCTIONS

  1) Make sure the plug is firmly plugged into the socket.






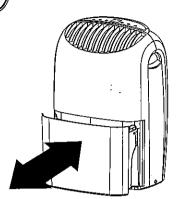

3 Full Tank Indicator

When the water tank is full, the indication lamp will light up, the dehumidifier will stop operating. Remove the water in the tank, then place the water tank back to it's proper position the machine will start operating again.

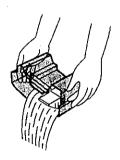


Remove the water in the water tank with two hands

4 DEFROST


When operating in low temperatures (less than 12°C) the surface of the evaporator will accumulate frost and effect the efficiency of the dehumidifier. When this happens the machine will go into periodic defrost mode automatically. This is quite normal. Defrost lamp will come on. Model (GDH-DEH20EP) will operate in temperatures down to 5°C. Defrost time may vary. If the dehumidifier freezes up, turn off at power supply and restart unit. If the temperature remains at a very low level, continuously outside the operational range off the dehumidifier, 5°C to 35°C the unit should be switched off. Please contact service provider immediately.

CONTINUOUS DRAINAGE


Continuous Drainage Feature

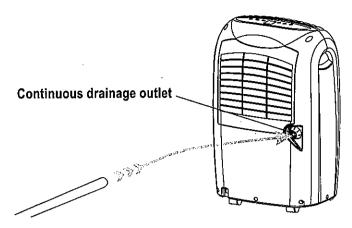


1) Put the PVC hose into the back of the closed hole, then connect the PVC hose to the front. (PVC hose is not sold with this unit but is readily available from your local hardware store.)

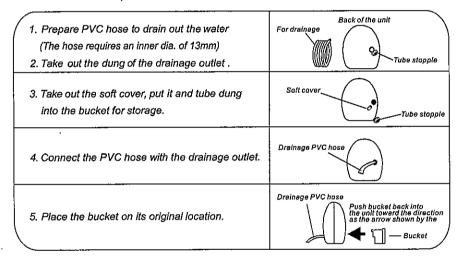


The Proper Way To Place The Water Drainage PVC Hose When using continuous drainage, the PVC hose most be placed below the drainage hole.

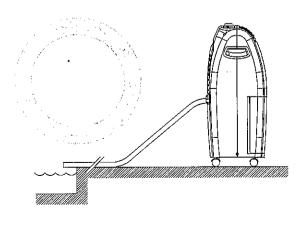

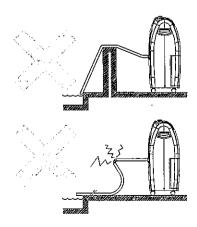


SAFETY GUIDE

 
Do not pull the plug out with the cord




Do not place the machine on an uneven surface

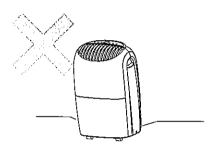


Do not put objects in the machine

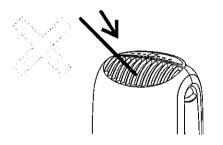


Keep the machine away from Extreme heat

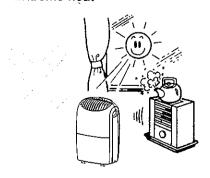


Do not spray insect repellent, oil or paint spray near the machine.

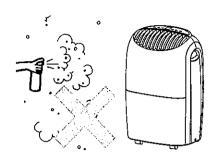


Keep the unit 20 cm away from the wall to dissipate the heat properly. Hang clothing at least 50 cm above the machine

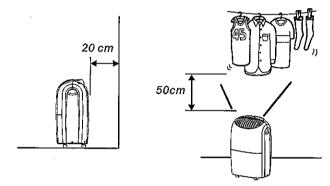

Close windows and doors when in use.

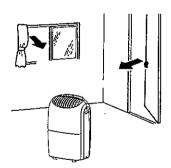

 When moving or storing, Keep dehumidifier upright



MAINTENANCE

For safety reasons please make sure the dehumidifier is unplugged before cleaning.

- 1) Cleaning the Casing:
 - A. Wipe the casing using soft and clean cloth.
 - B. Use mild detergent and a damp cloth to clean
 - C. Do not submerge unit in water
- 2) Cleaning the Air Filter:

 
The propose of the air filter is to filter the dust or other materials in the air. clean the filter every two weeks.

Cleaning Steps:

A. Pull out the filter gently.



B. Clean the filter by using a vacuum cleaner or washing it with clean water. Then dry the filter with a cloth.



are to be the arrangement of the control of

C. Place the filter back to it's position.

If a problem occurs, unplug the machine and contact your Dimplex Service Center immediately on 0800 666 2824. Do not tamper with the internal workings of the unit.

SPECIFIC ATIONS

MODEL	GDH-DEH20EP
POWER	220-240V/50Hz
MOISTURE REMOVAL	20 L/D (30°C 80%RH)
POWER INPUT	320W
SIZE (W×H×D)	362*582*270 mm
WEIGHT	13.5 kg
OPERATING TEMPERATURE	5°C ~ 35°C

• If the power cord on this unit is damaged it must be replaced by the manufacturer, a service agent or qualified persons in order to avoid a hazard.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Glen Dimplex Australasia Ltd

38 Harris Road, East Tamaki Auckland, NEW ZEALAND TEL: 0800 666 2824 FAX: 09 274 8472