

# FASCIA ASSEMBLY & INSTALLATION

- 1) Lay the fascia panels flat, face down on something soft so they don't scratch.
- 2) Take the top mantel and align the holes in it with the holes in the side panels. Using the flat head screws provided, attach the top of the side panel's to the mantel (the holes in the mantel are slightly larger than the holes in the side panel to facilitate easier installation). See Diagram 1.

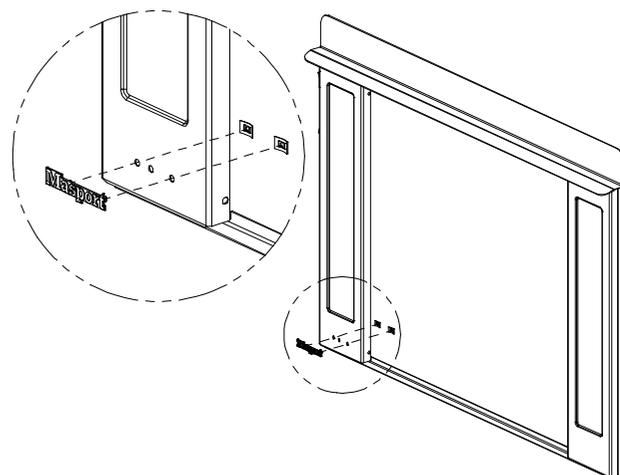


Diagram 2

- 5) Take the 2 switches supplied with the fire and push them into the rectangular switch holes in the left hand side of the fascia. The 3 terminal switch must be in the bottom hole and the 2 terminal switch must be in the top hole. Refer diagram 3.

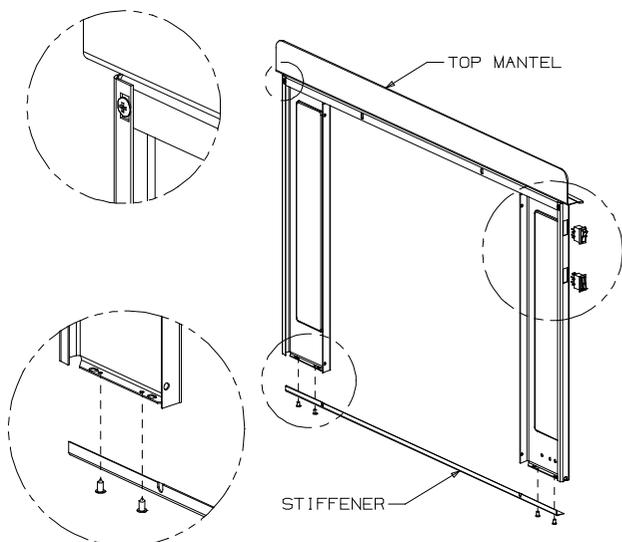


Diagram 1  
Rear View

**Hint: Don't** tighten the screws down completely at this point, continue on with steps 3 and 4 and do a trial fit to the unit. Make any necessary adjustments and when it fits properly then tighten down the screws.

- 3) Next the Fascia stiffener is attached to the Fascia. Attach the stiffener to the bottom of the fascia side panels with the screws provided. See Diagram 1.
- 4) If not already fitted push the Masport logo badge into the holes in the bottom left corner of the fascia and attach it using the clips provided. See diagram 2.

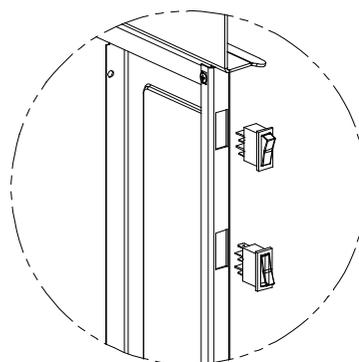
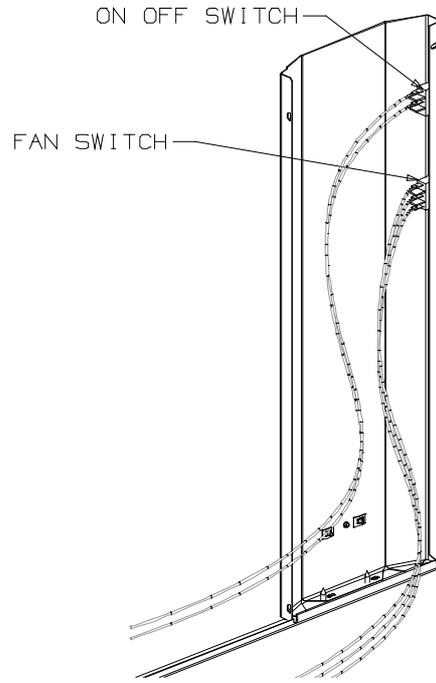


Diagram 3

- 6) Connect the fan switch wires by taking the orange, brown and red wires with the female ends (in the thick wiring loom) and connect them to the fan switch (ie. the 3 terminal bottom switch) noting the following positions. Connect the brown wire to the middle terminal, connect the orange wire to the top terminal and connect the red wire to the bottom terminal.



**Diagram 4**

- 6) Connect the ON/OFF switch wires by taking the black and white wires with the female ends and connect them to the ON/OFF switch (ie. the top 2 terminal switch).
- 7) Tuck the wires into the fascia to keep them away from the insert a clip or tie. Attach the clip to the rear of the faceplate to ensure that the wires do not touch the side of the unit. Diagram 4.
- 8) The power cord should be run behind the fascia panel and out through the slot in the bottom of the fascia.
- 9) Attach the fascia panels to the insert body using the 4 remaining black screws. For further assembly instructions refer to the owner/operating manual.